

## ASSEMBLING INSTRUCTION


## LEGEND

WINDSHIELD  
KAWASAKI VERSYS 650 (14-21)

**KV6300-19**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

- |   |  |   |
|---|--|---|
| 1. M5X20 SCREW<br>VITE M5X20<br>TORNILLO M5X20<br>M5X20 SCHRAUBE<br>VIS M5X20 | 3. TEFLON WASHER<br>RONDELLA DI TEFLON<br>ARANDELA DE TEFLON<br>TEFLON SCHEIBE<br>RONDELLE EN TEFLON | 5. SPACER TUBE H.3<br>DISTANZIALE H.3<br>DISTANCIADOR H.3<br>Distanzrohr H.3<br>ESPACEUR H.3          |
| 2. M5X14 SCREW<br>VITE M5X14<br>TORNILLO M5X14<br>M5X14 SCHRAUBE<br>VIS M5X14 | 4. RUBBER WASHER<br>RONDELLA DI GOMMA<br>ARANDELA DE GOMA<br>GUMMISCHEIBE<br>RONDELLE EN CAOUTCHOUC  | 6. SPECIAL WASHER<br>RONDELLA SPECIALE<br>ARANDELA ESPECIAL<br>BESONDERE SCHEIBE<br>RONDELLE SPÉCIALE |

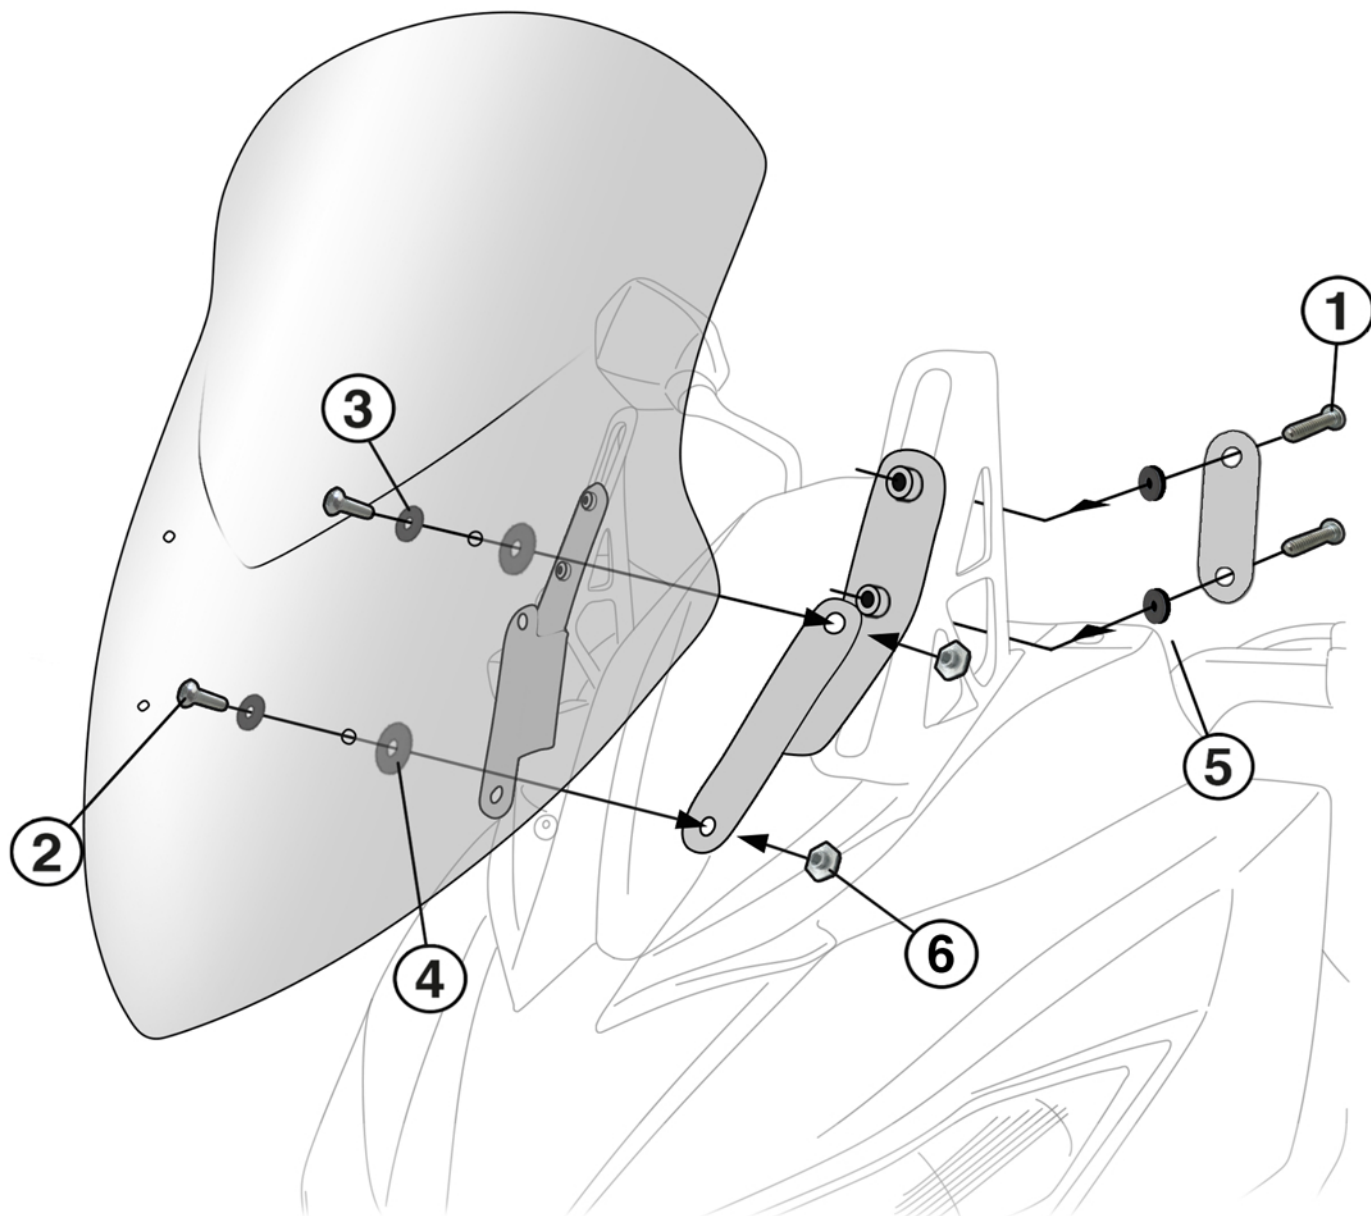

**EN:** DO NOT OVER-TIGHTEN THE SCREWS TO AVOID DAMAGING THE PLEXIGLASS  
**IT:** NON STRINGERE TROPPO LE VITI PER EVITARE IL DANNEGGIAMENTO DEL PLEXIGLASS  
**ES:** DO NOT OVER-TIGHTEN THE SCREWS TO AVOID DAMAGING THE PLEXIGLASS  
**DE:** ZIEHEN SIE DIE SCHRAUBEN NICHT ZU FEST AN, UM DAS PLEXIGLAS NICHT ZU BESCHÄDIGEN  
**FR:** NE PAS TROP SERRER LES VIS POUR ÉVITER D'ENDOMMAGER LE PLEXIGLAS